

IMPORTANT INSTRUCTIONS FOR USE OF REVERSE CYCLE AIRCONDITIONING SYSTEMS.

USE OF ZONE MOTORS

Zone motors control the airflow to the selected areas of your home.

To ensure the maximum life of these zone motors, please follow these instructions when changing zones.

CHANGING ZONES TO REDIRECT AIRFLOW

1. Turn the airconditioner OFF via the 'Start / Stop' button.
2. Select the new zone (s) you require.
3. Wait 60 seconds.
4. Then turn the airconditioner ON via the 'Start / Stop' button.

If the above procedure isn't followed, it can cause the zone motor to fail prematurely.

A failed zone motor, caused by incorrect operation, is NOT covered in the initial Warranty.